 
 
 
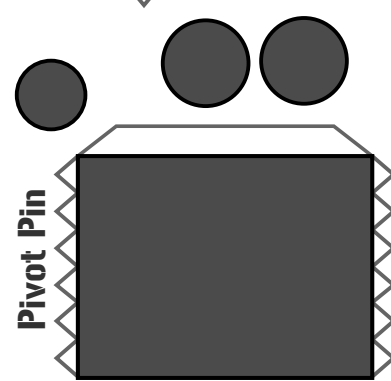 
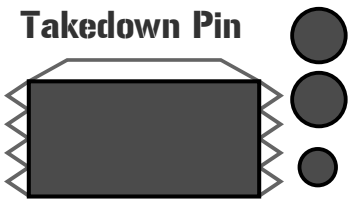 
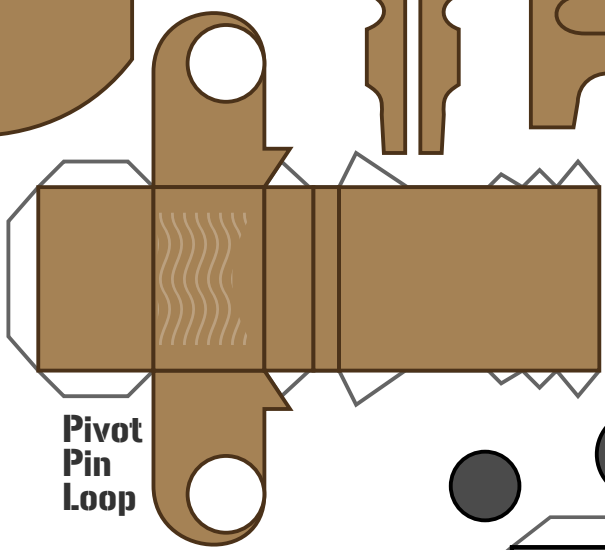 
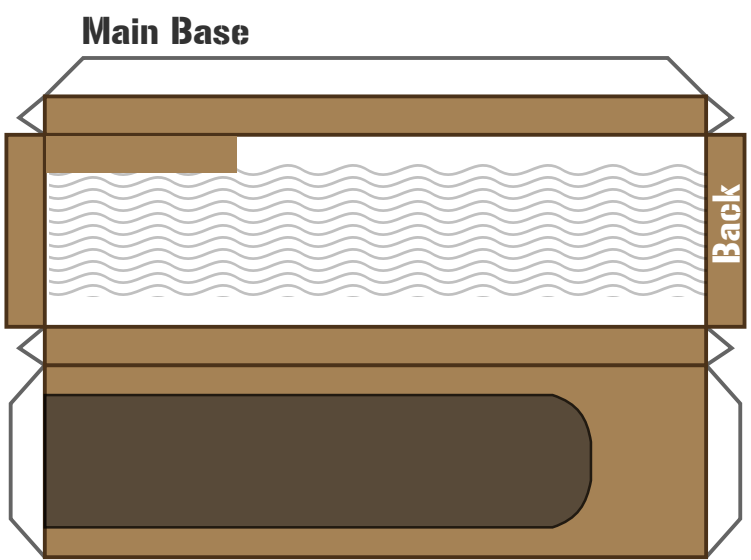 
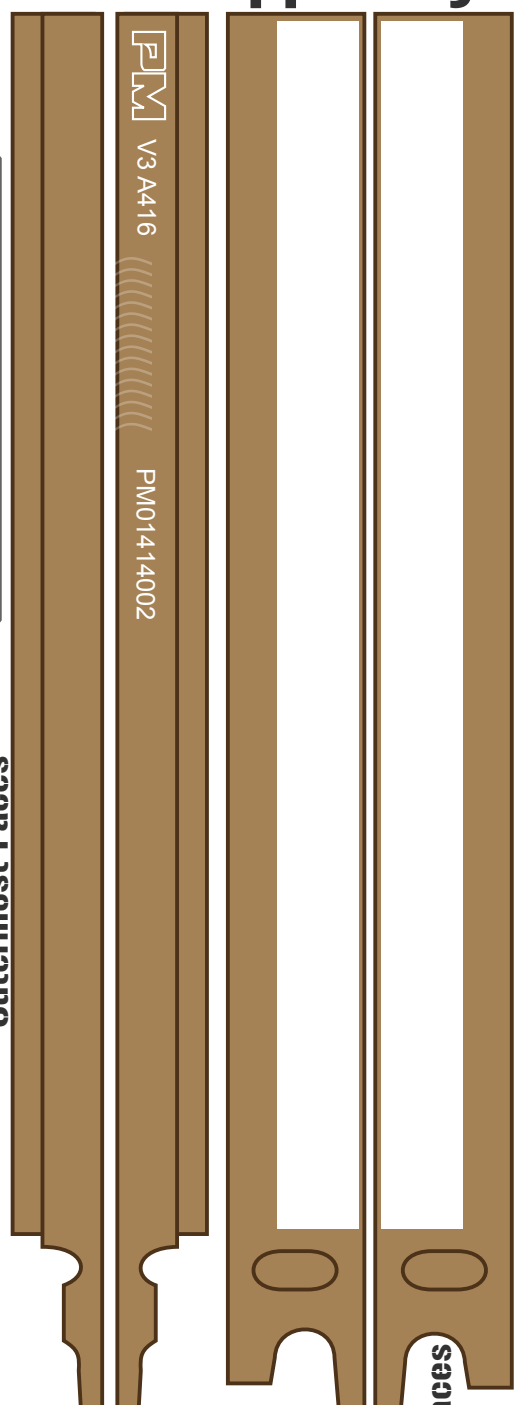 
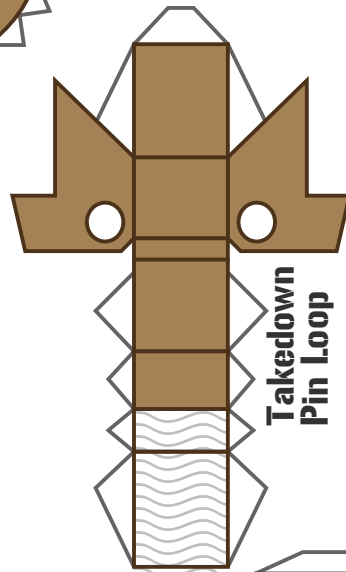 
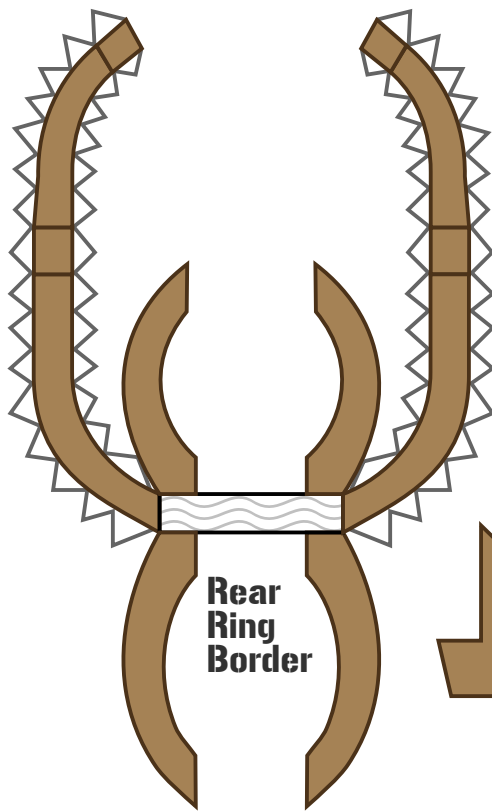 


Outermost Faces

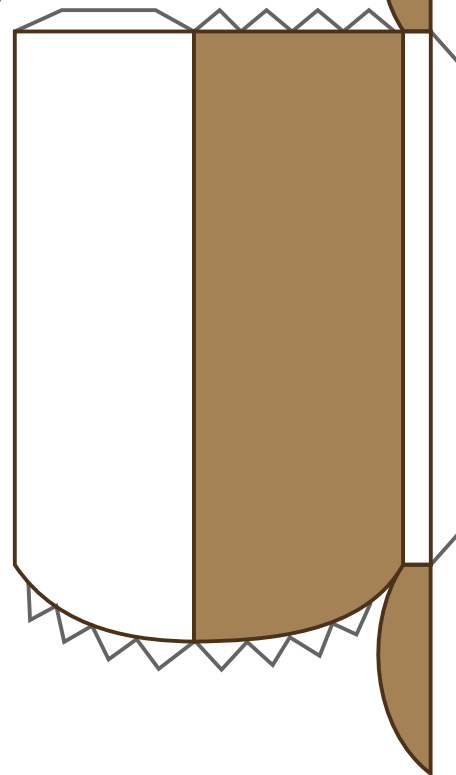 


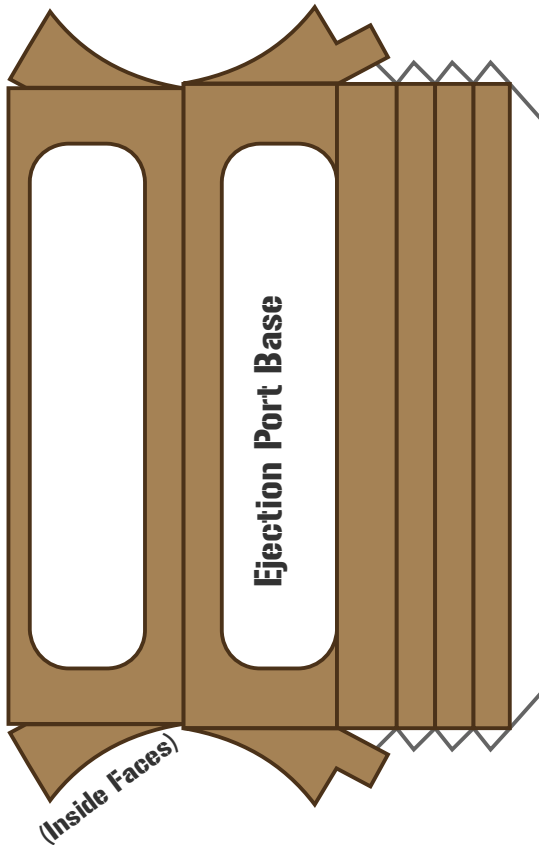


Base Left Protrusion

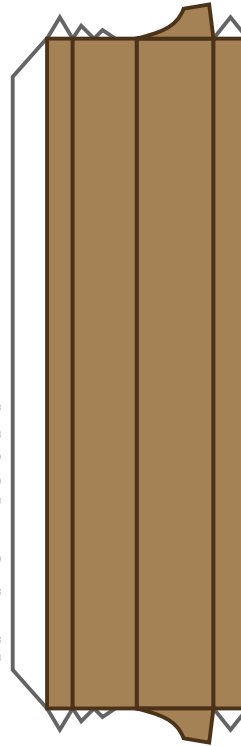

Right Outside Wall (Rear Section)

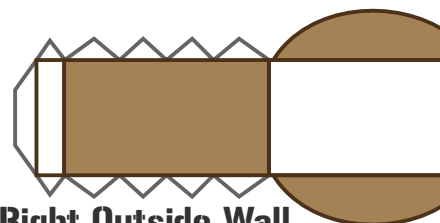

Right Outside Wall (Front Section)

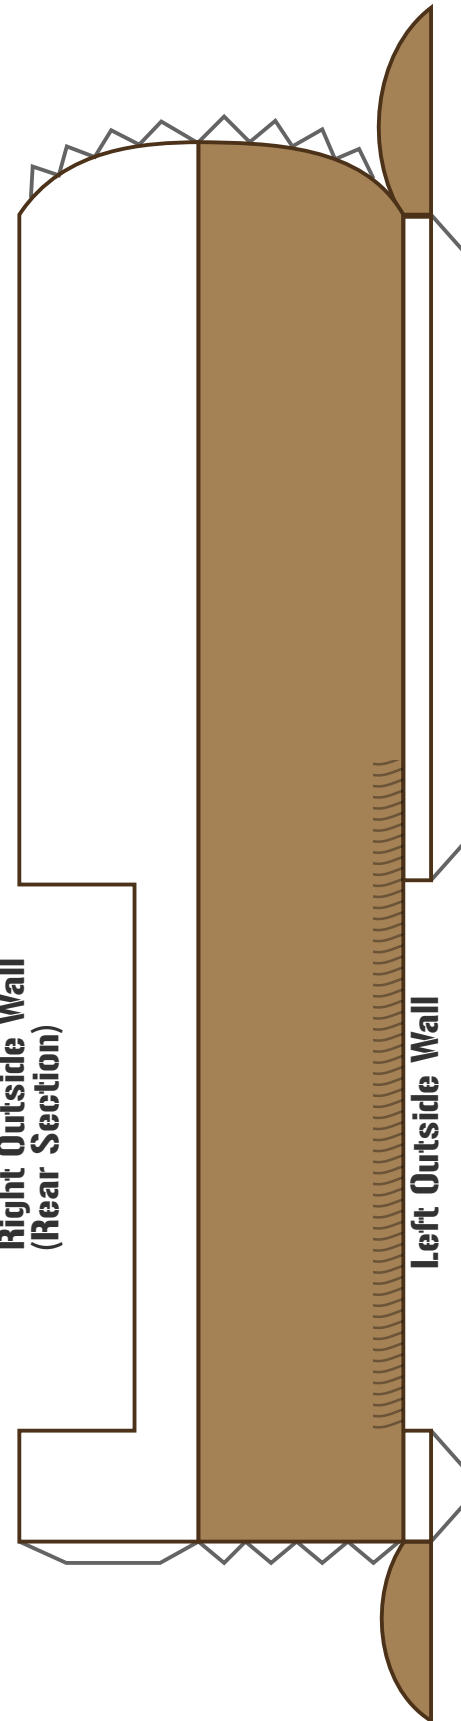 

Left Outside Wall

Ejection Port Rim Interior

Ejection Port Rim

(Attaches to outside of ejection port, has loops for cover axle)

Barrel Well

Piston Well

Top Wall Lining

Dust Cover  
Inner Bump

Ejection  
Port Axle

Forward  
Assist  
Housing

 
Dust Cover

 
 
 
Forward Assist

Forward Assist Cap


Dust Cover Bottom Rim

Dust Cover Top Rim

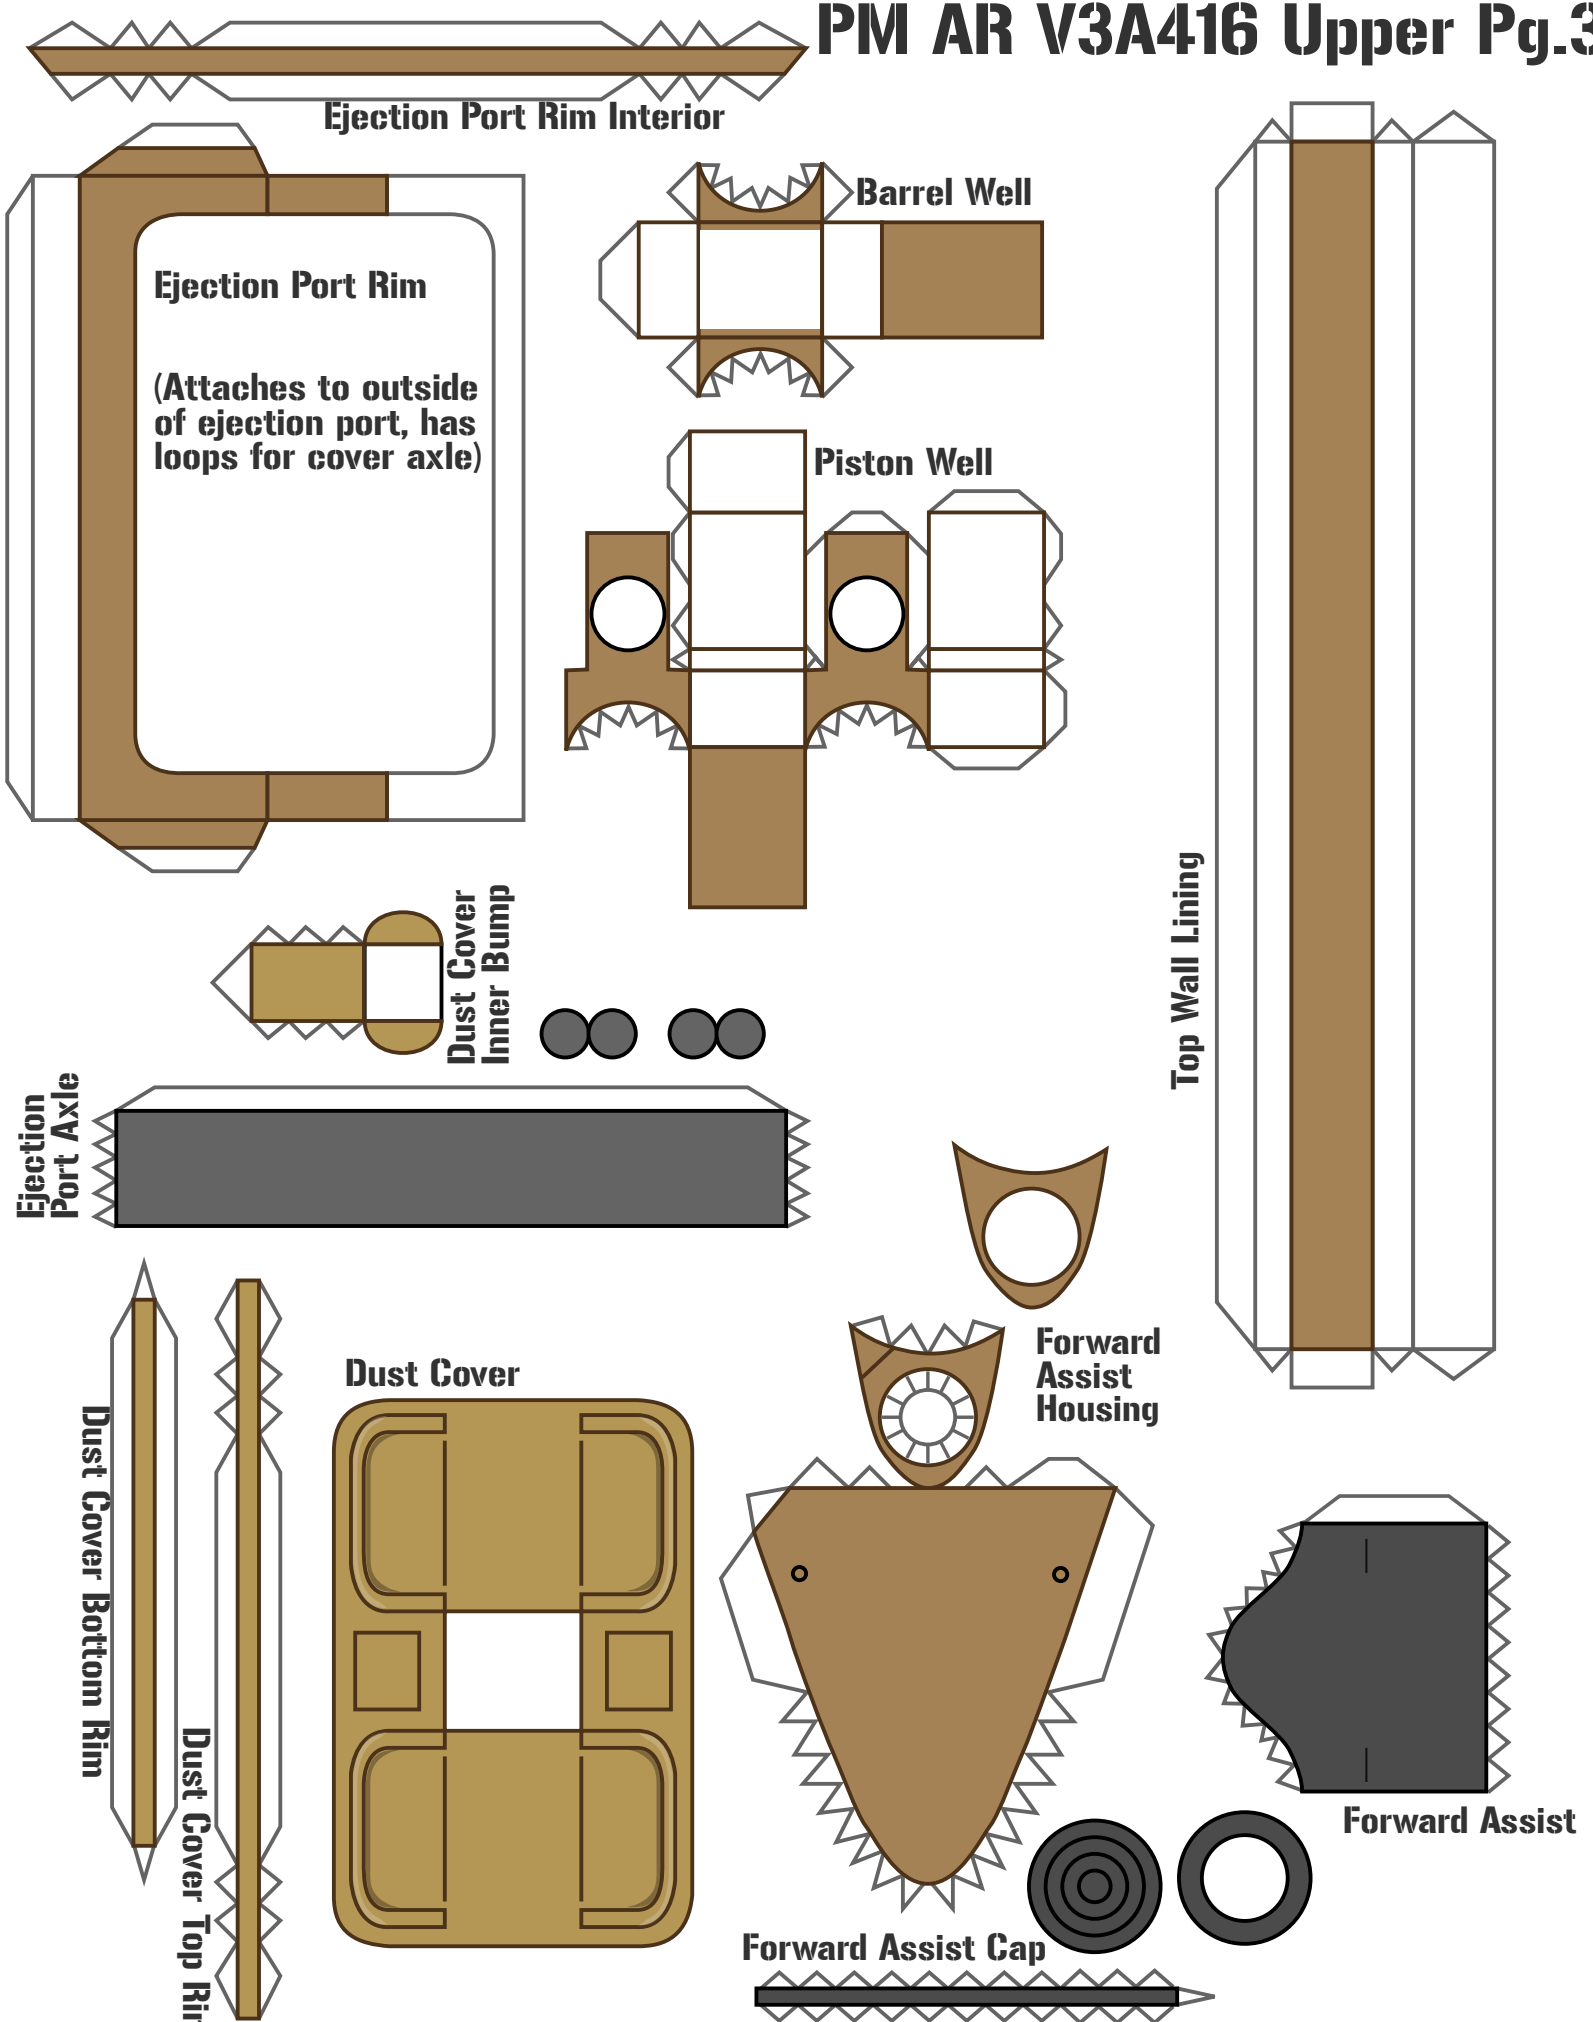


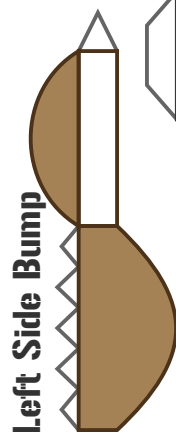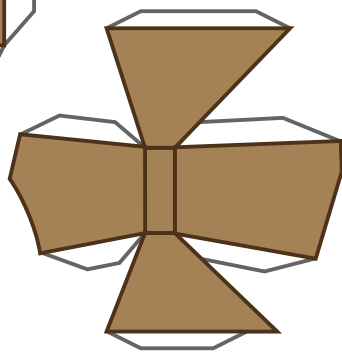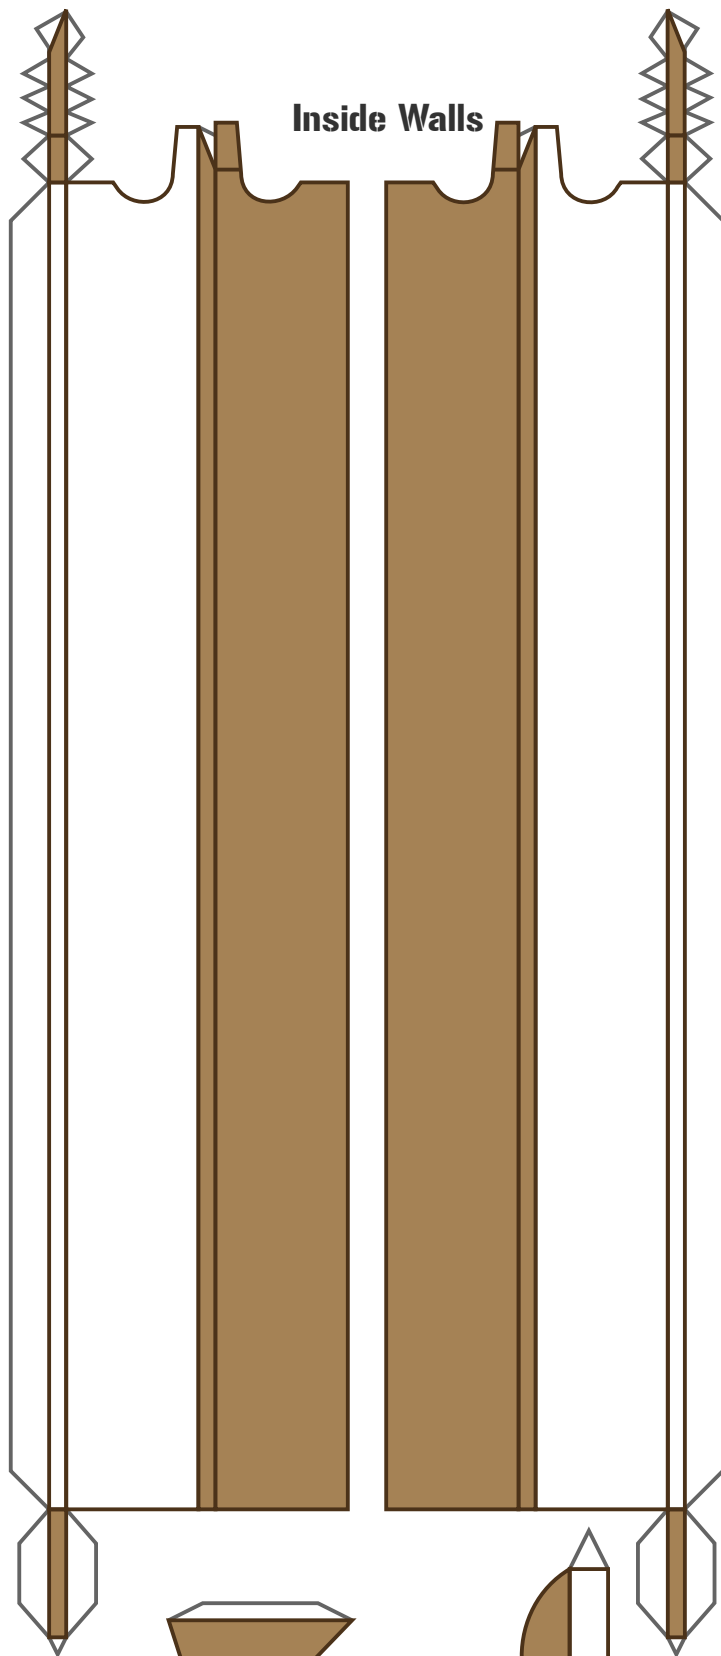


Top Rail Base

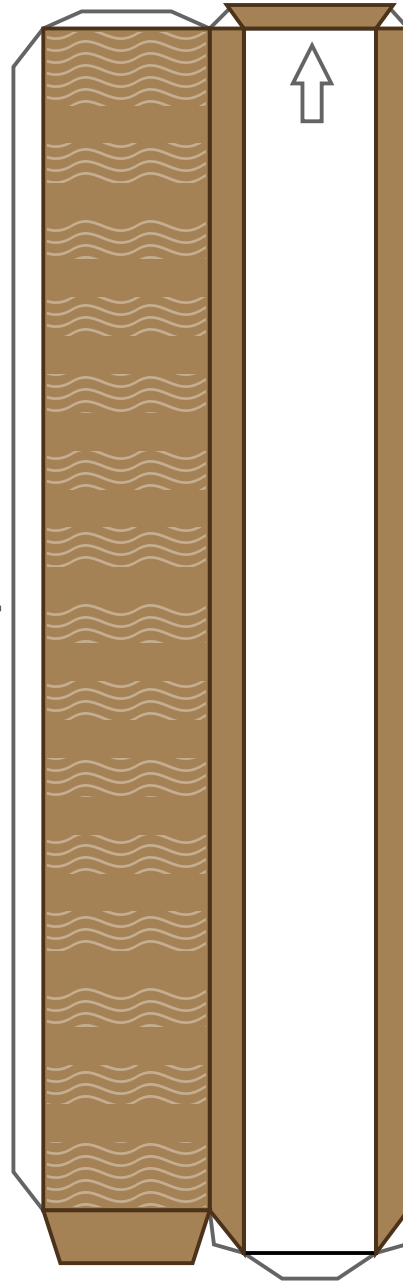 


Top Rail Segments

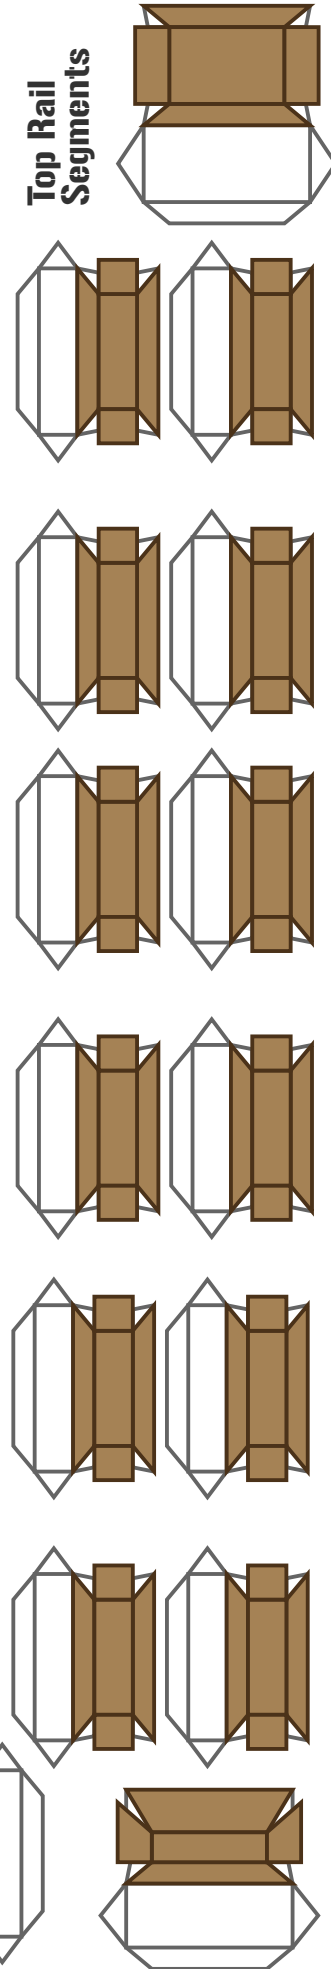 

Top Rear Tail

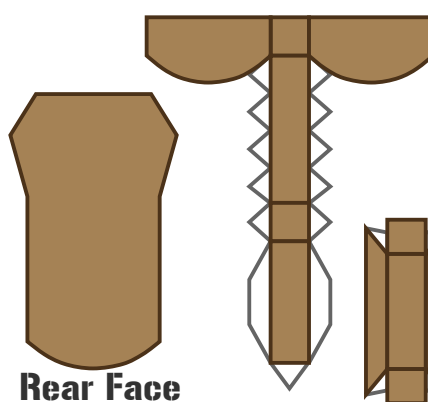 

Rear Face

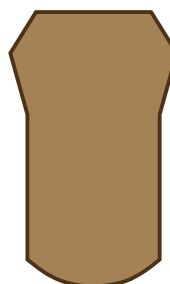 

# PM AR V3A416 Upper Pg.5 (Bolt Carrier Group)

**Bolt Face**

**Bolt Neck**

**Bolt Carrier**

**Charging Handle Lengths**

**Charging Handle Latch**

**Charging Handle Bottom**

**Charging Handle Top**

**Charging Handle Outer Face**

**Top Attachment**

