 
 
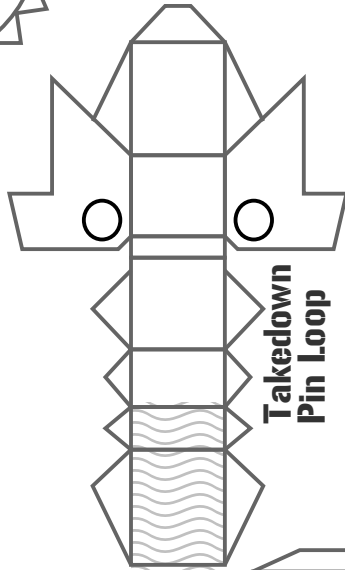 


**Rear
Ring
Border**

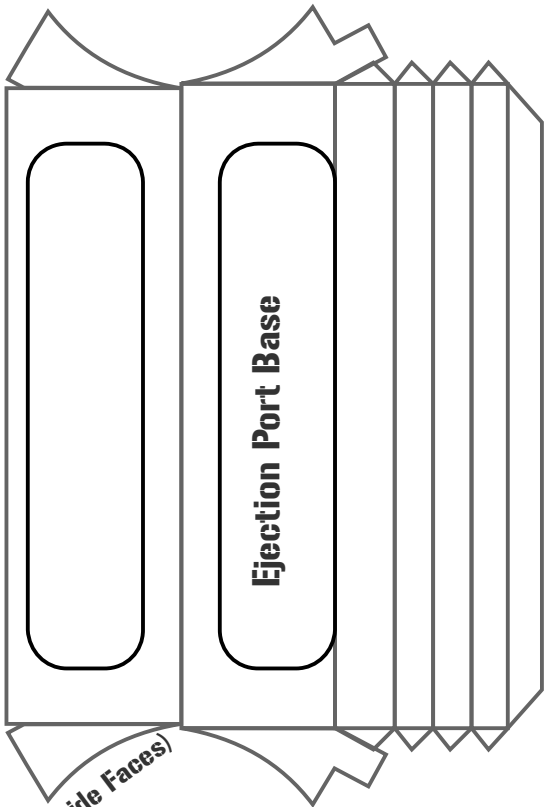

 
**Takedown
Pin Loop**

Base Left Protrusion

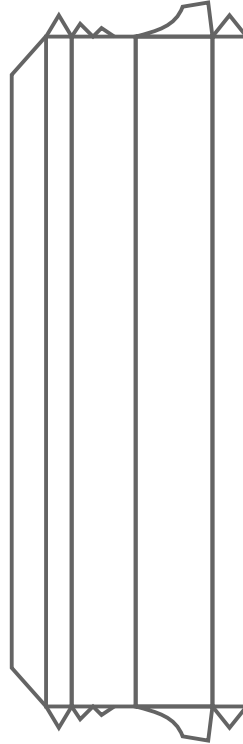


Ejection Port Base


(Inside Faces)

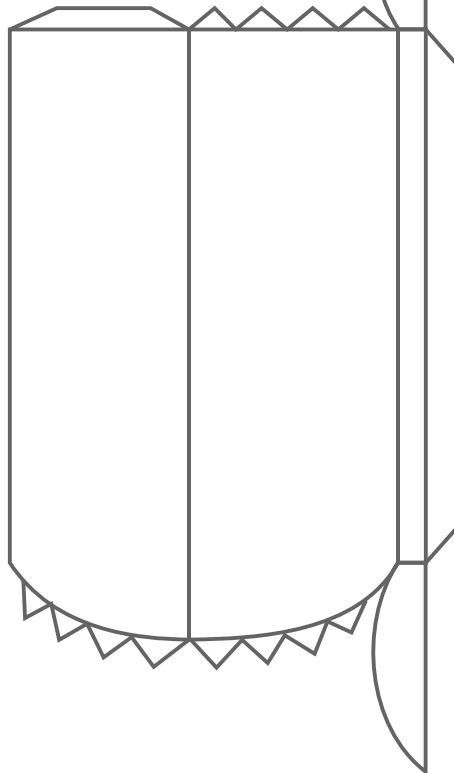

**Right Outside Wall
(Rear Section)**

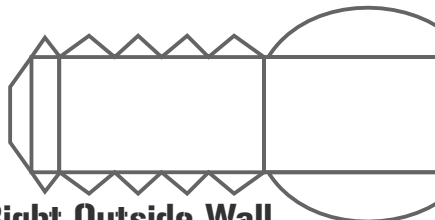 

**Right Outside Wall
(Front Section)**

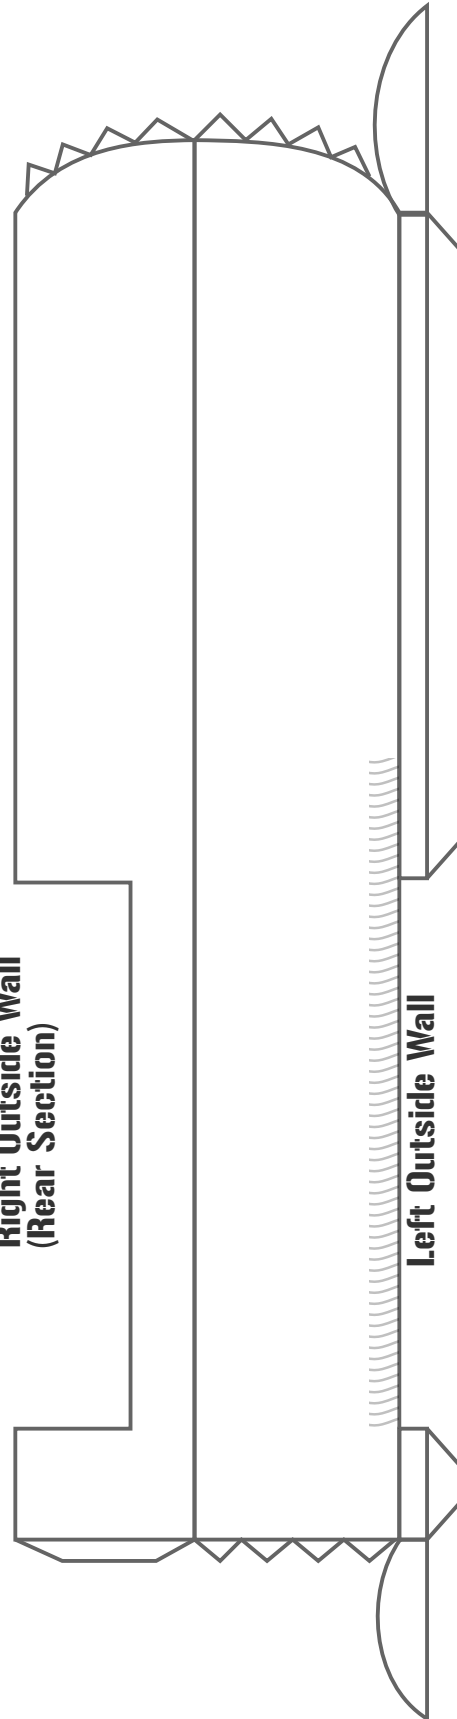 

Left Outside Wall

Ejection Port Rim Interior

Ejection Port Rim

(Attaches to outside of ejection port, has loops for cover axle)

Barrel Well

Piston Well

Top Wall Lining

Dust Cover
Inner Bump

Ejection
Port Axle

Forward
Assist
Housing

 
Dust Cover

Forward Assist


Forward Assist Cap

Dust Cover Bottom Rim

Dust Cover Top Rim

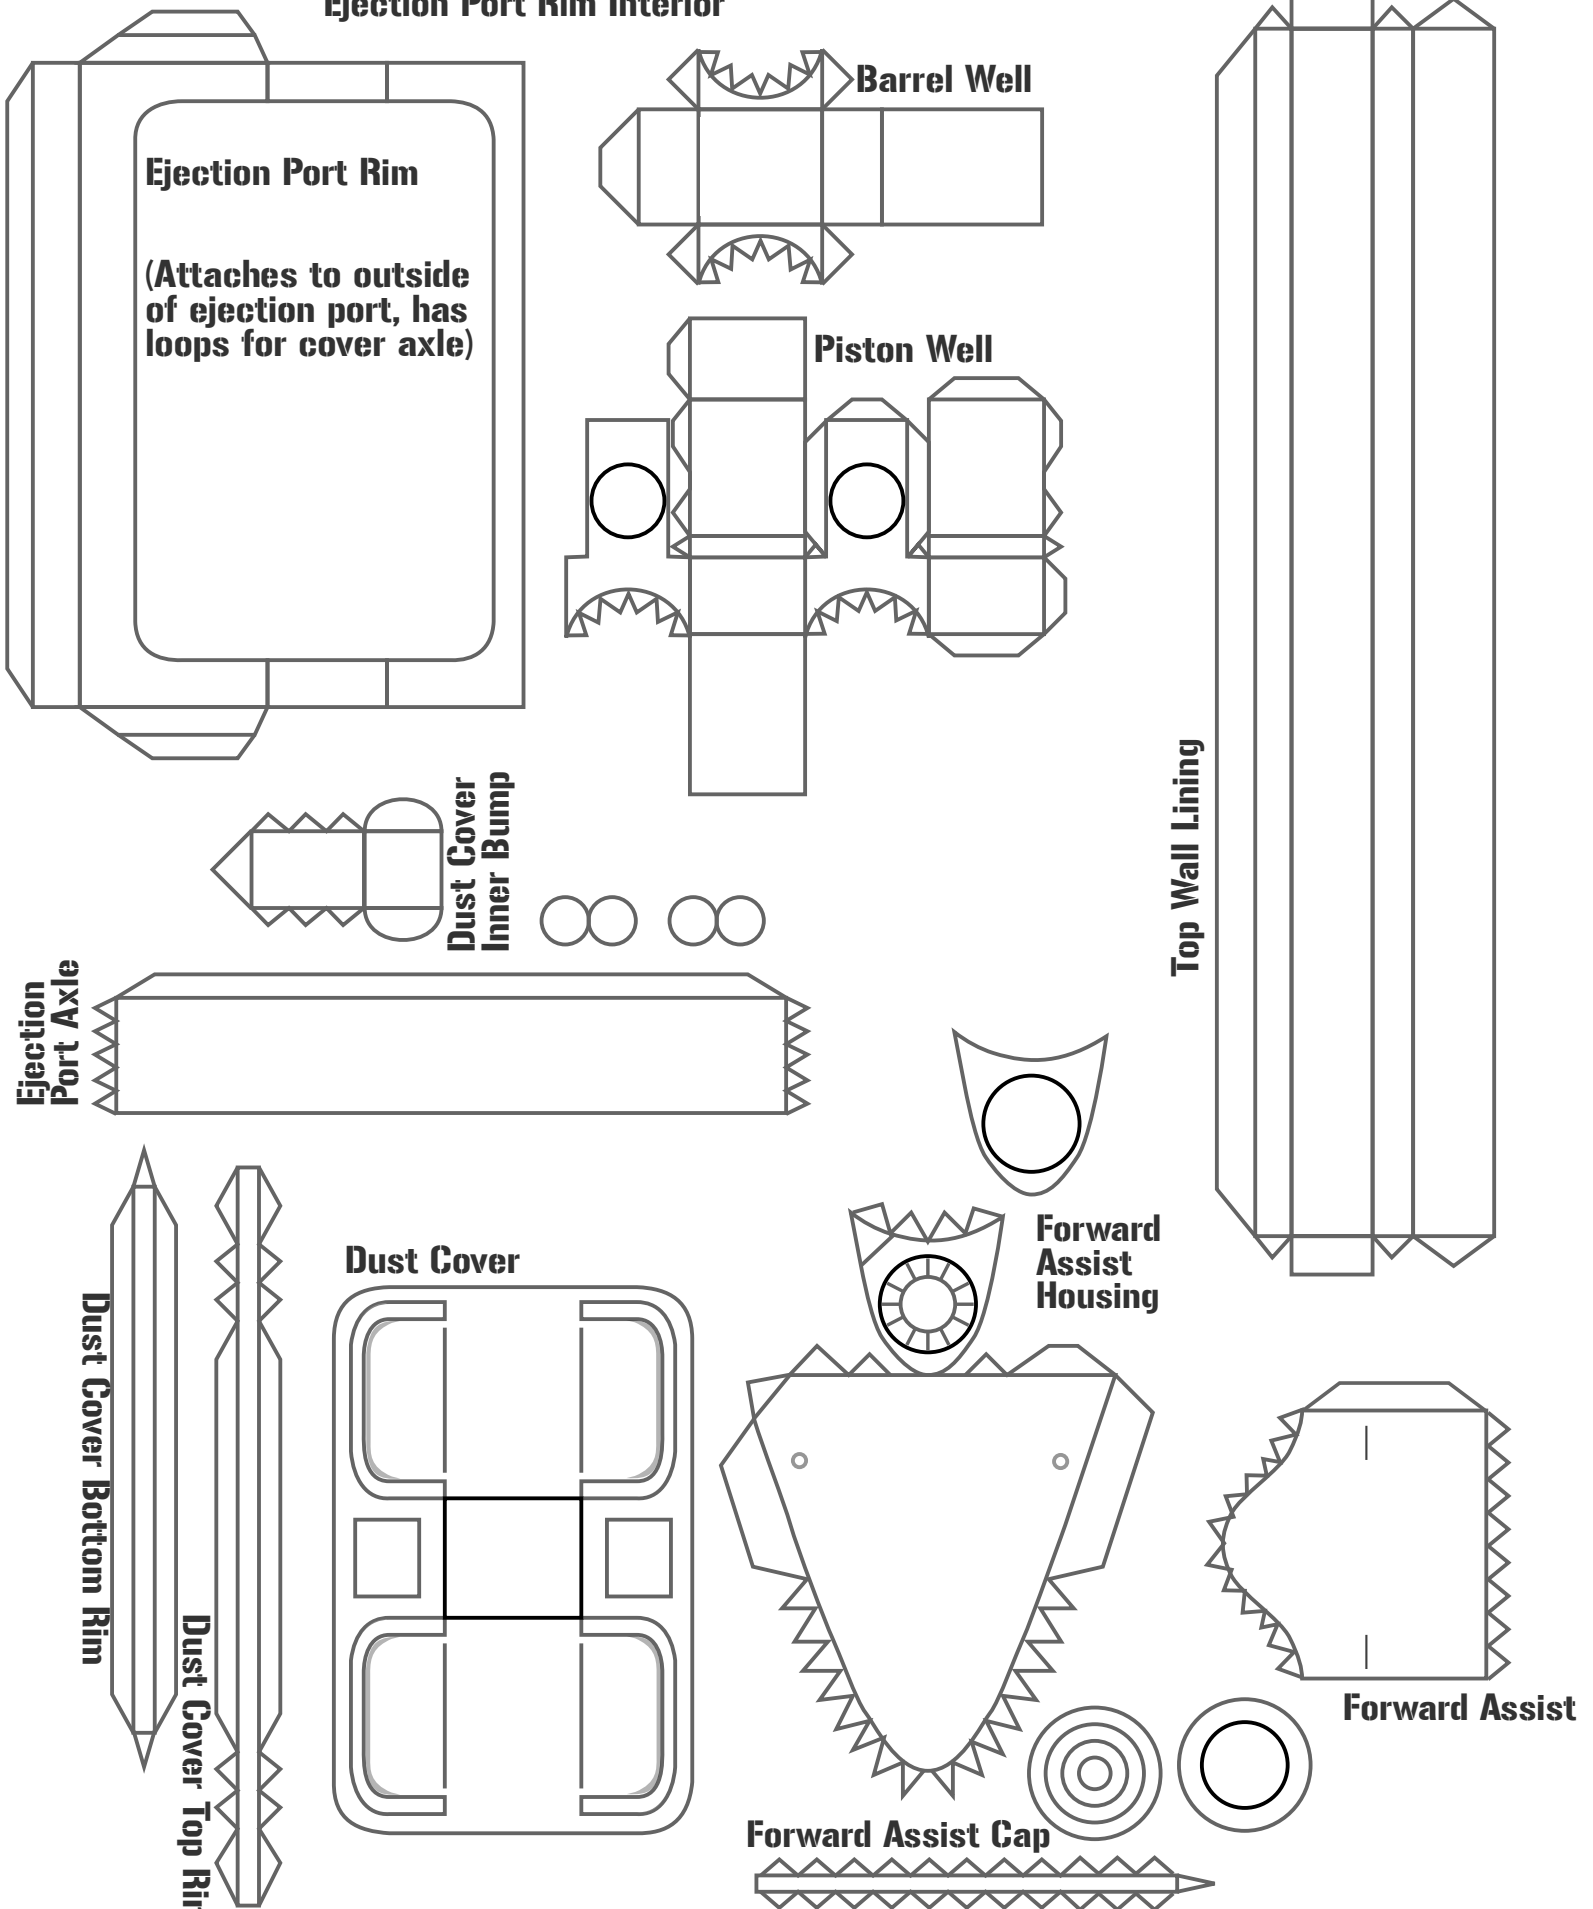


PM AR V3A416 Upper Pg.4









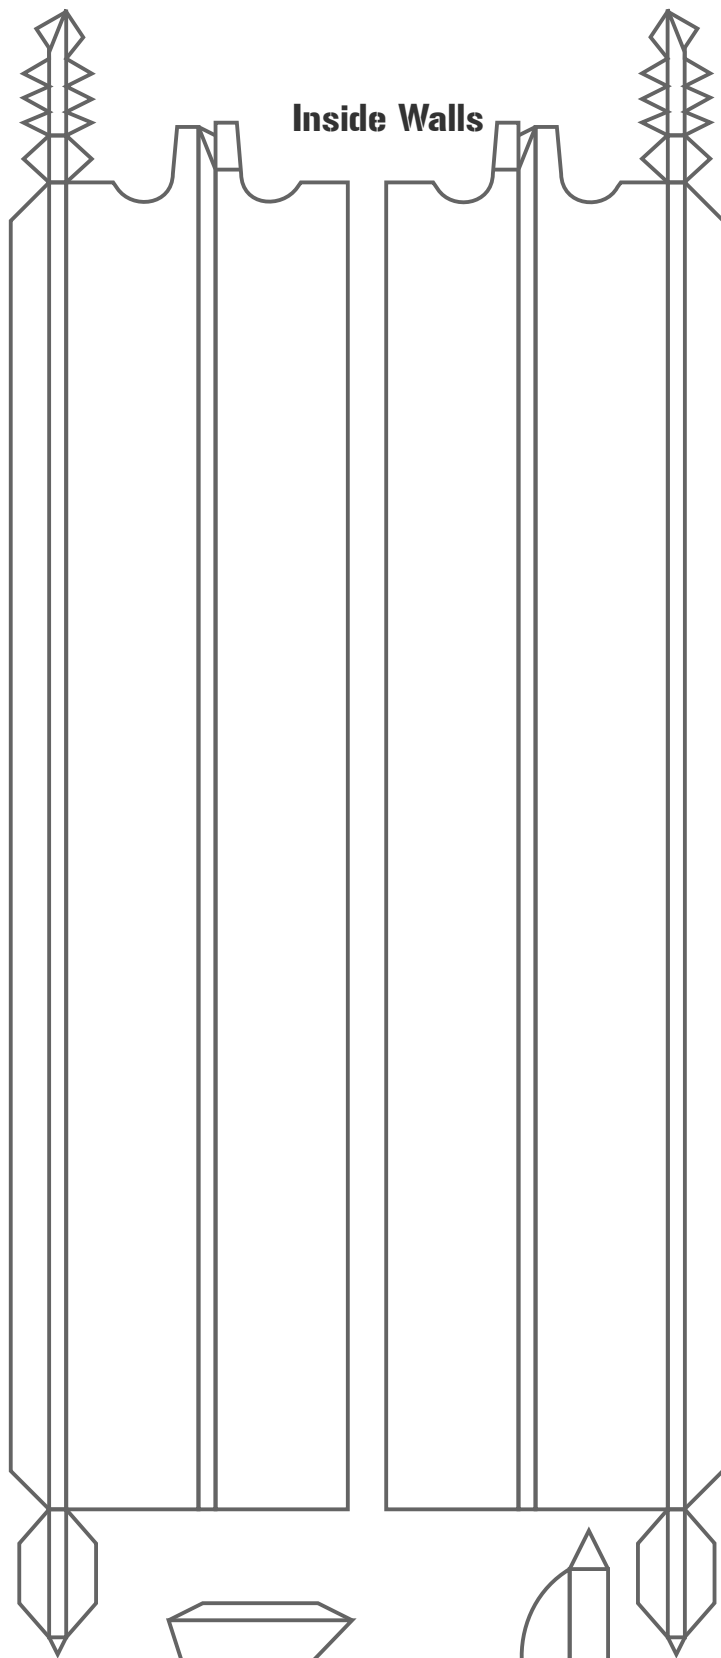 


Inside Walls

 Top Rail Base

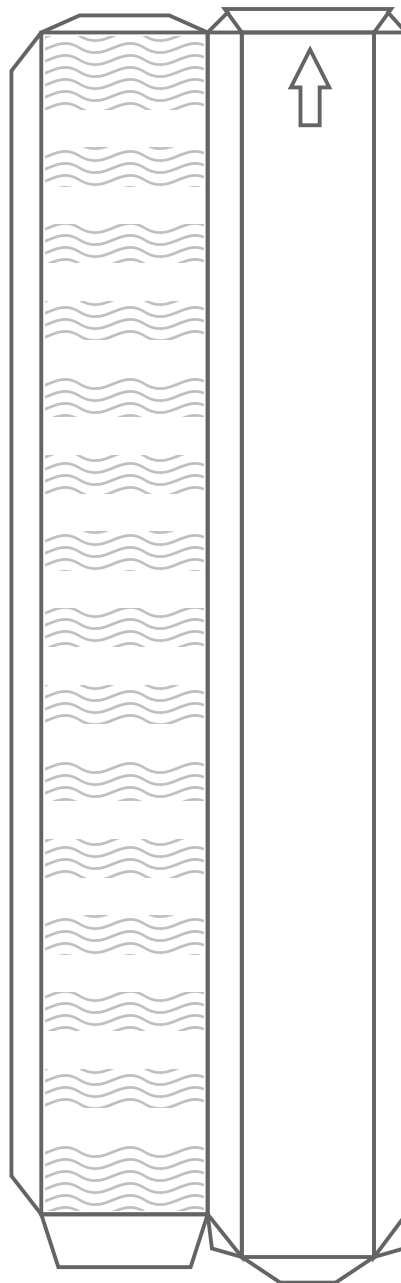


Top Rail
Segments

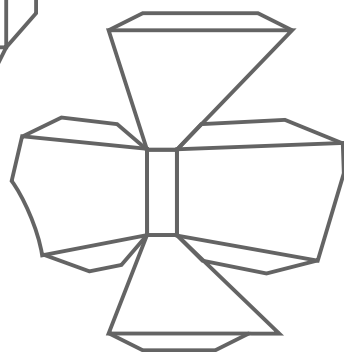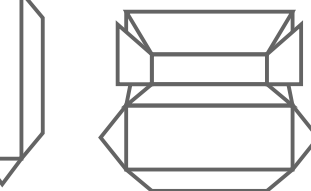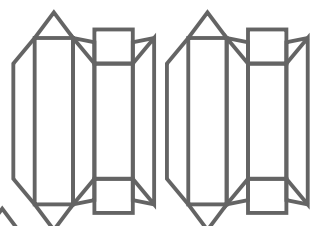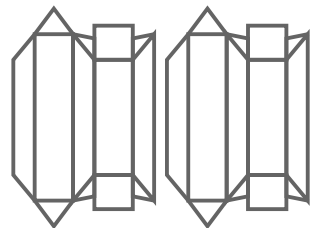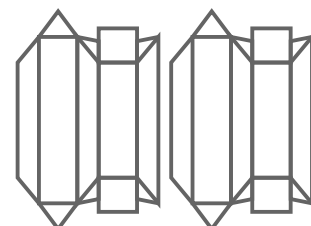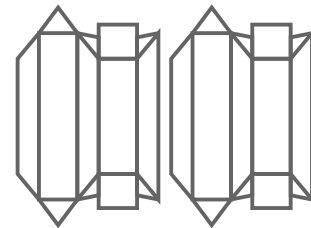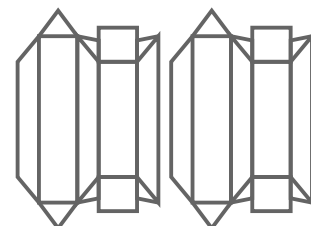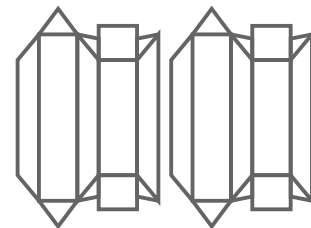        
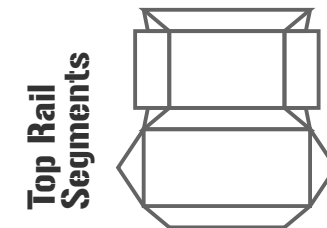 


Brass Deflector

 Left Side Bump

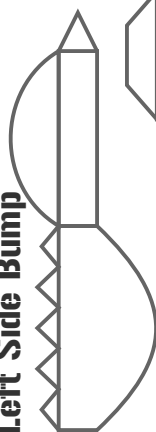


Top Rear Tail

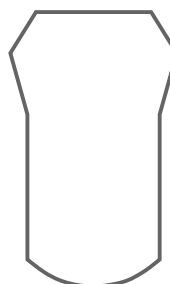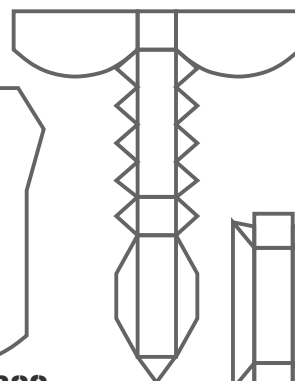  



Rear Face

**PM AR V3A416 Upper Pg.5
(Bolt Carrier Group)**

 
Bolt Face

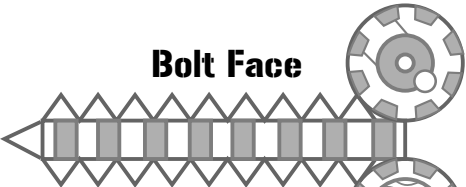

Bolt Neck

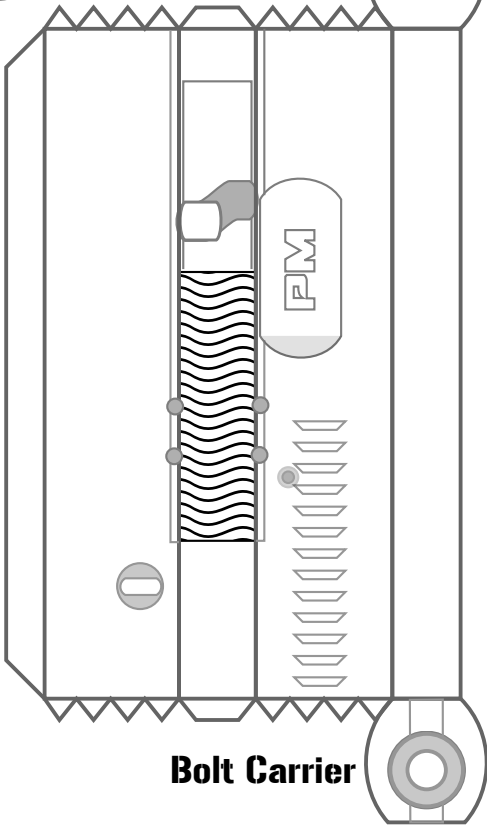 
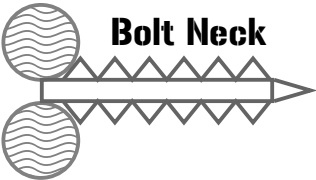 


Bolt Carrier

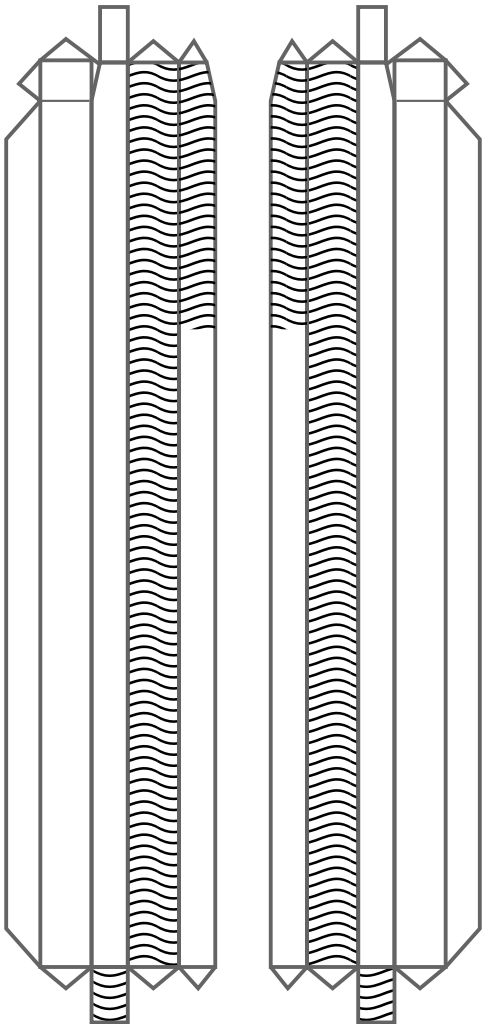 


Charging Handle Lengths

  
Charging Handle Latch

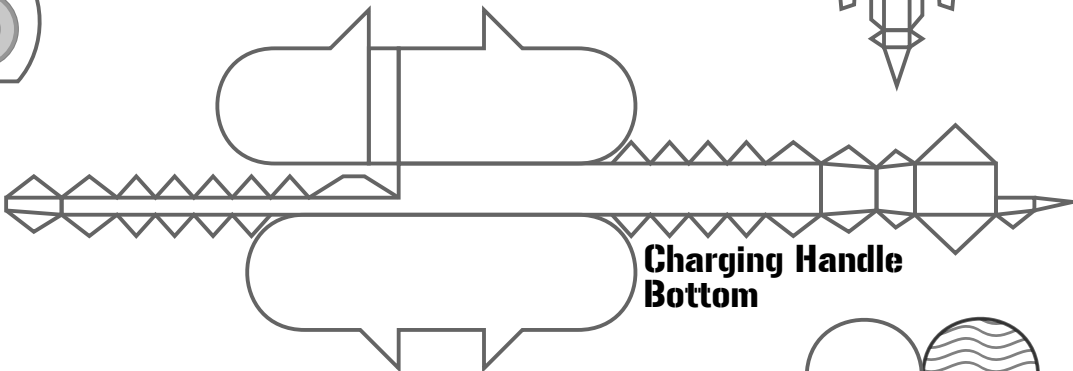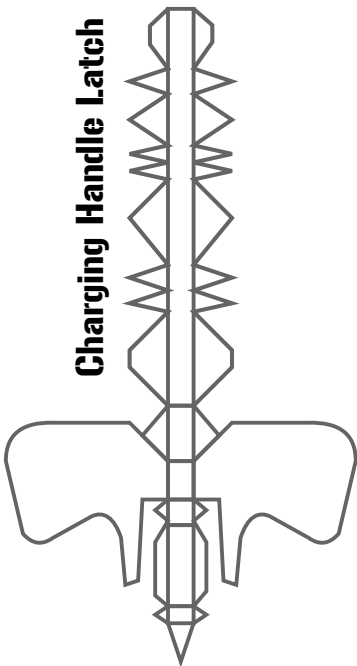

Charging Handle Bottom

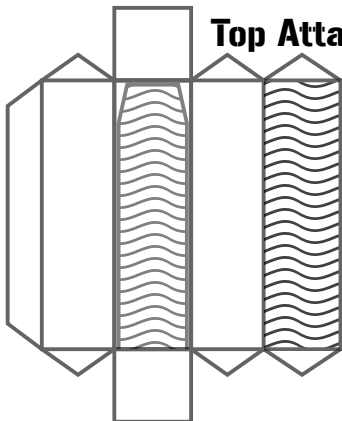 

Top Attachment

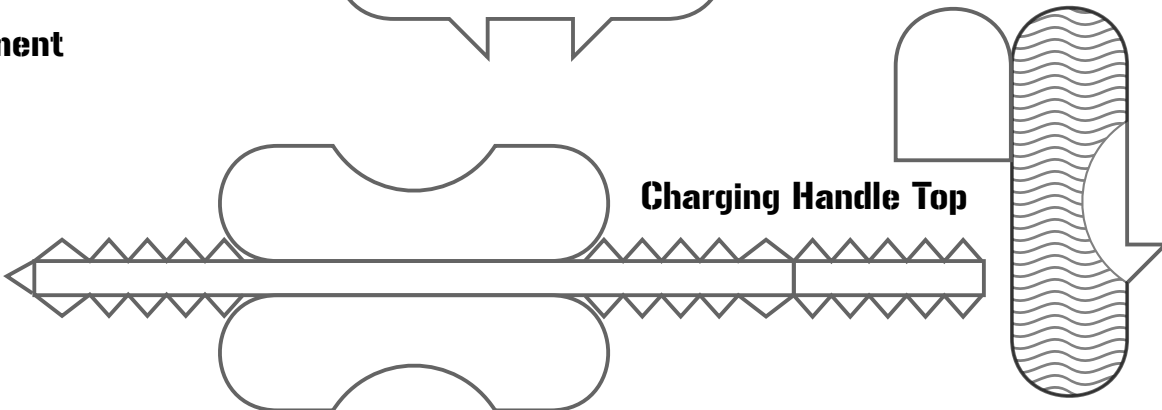 

Charging Handle Top



Charging Handle Outer Face