

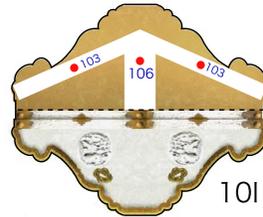
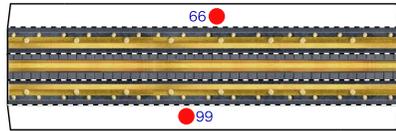




10D

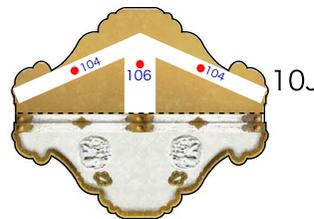


10F

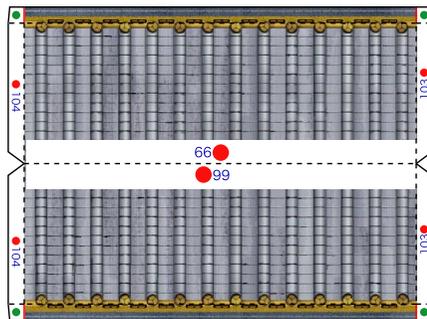



10A

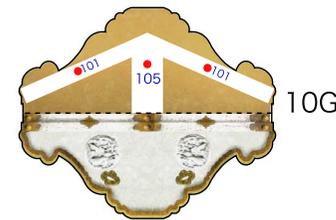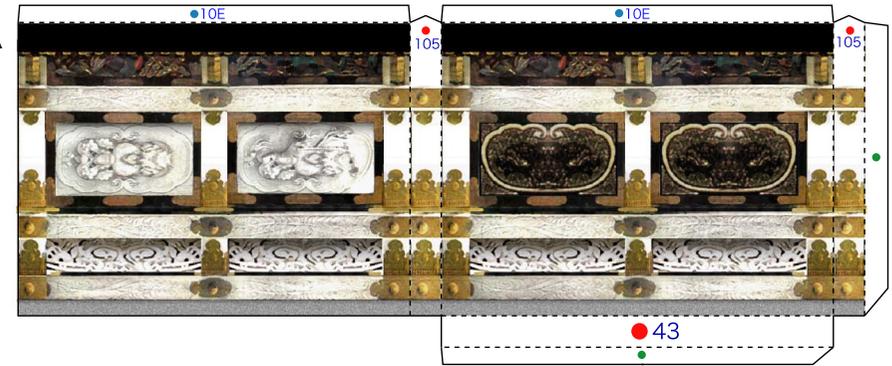


10C

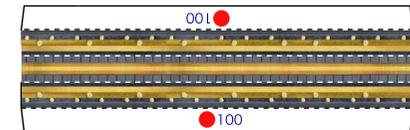








10H





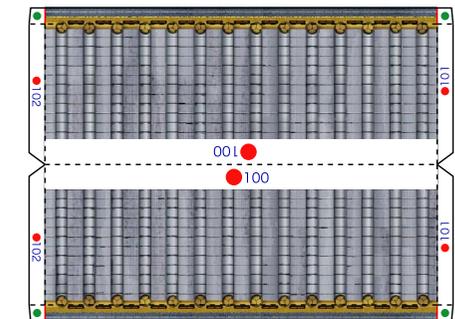
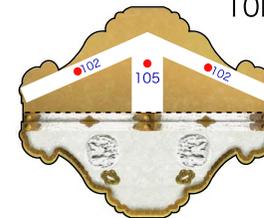


10E



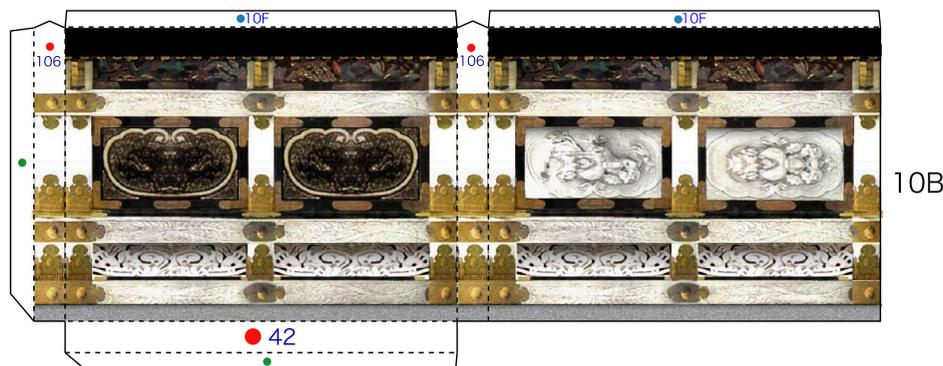



10B

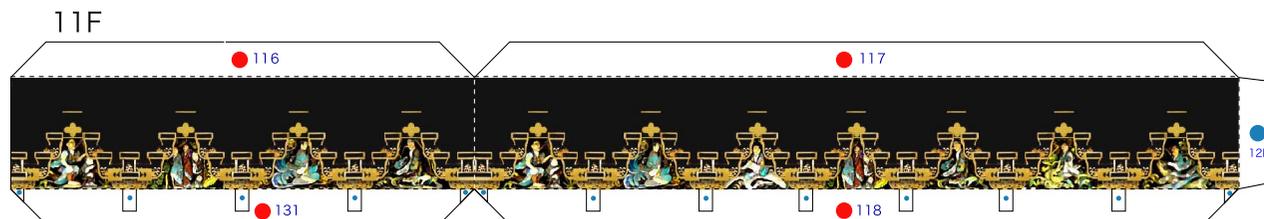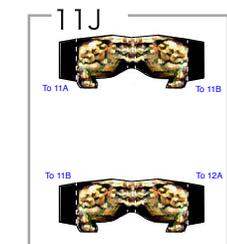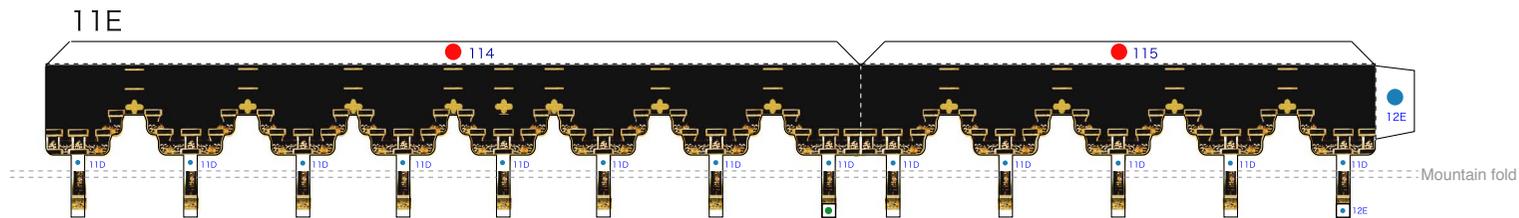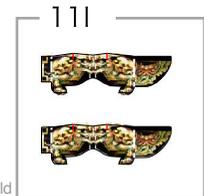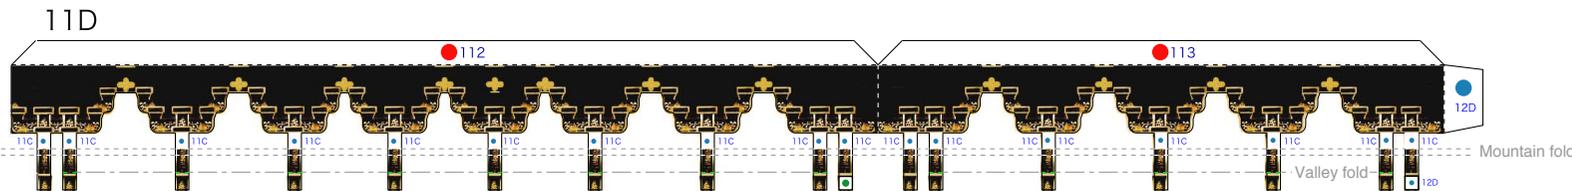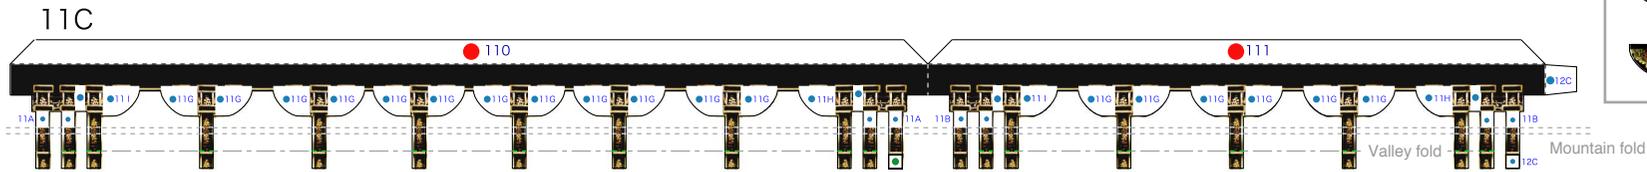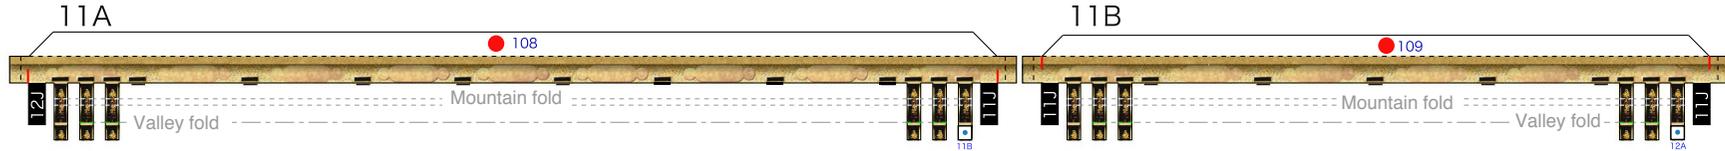

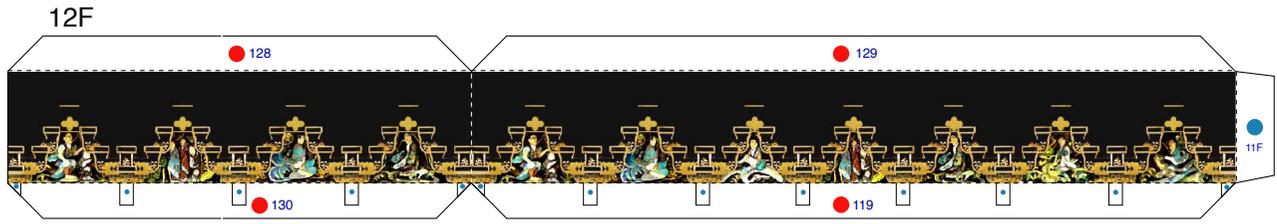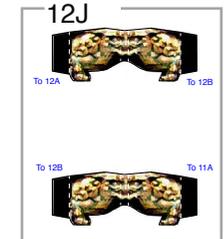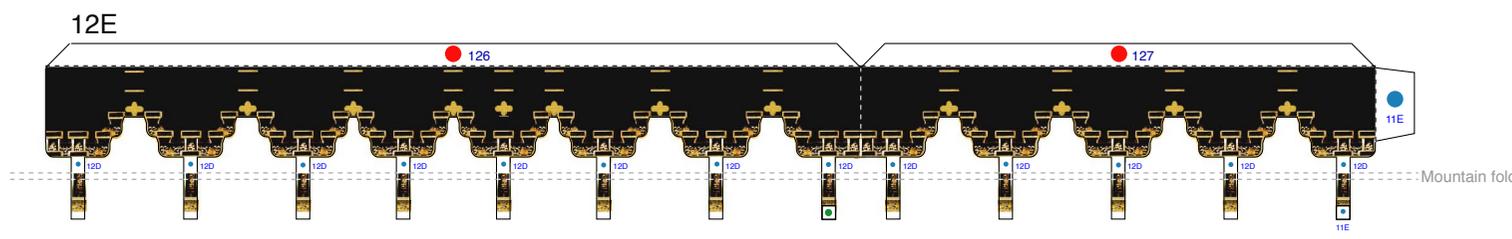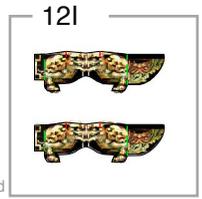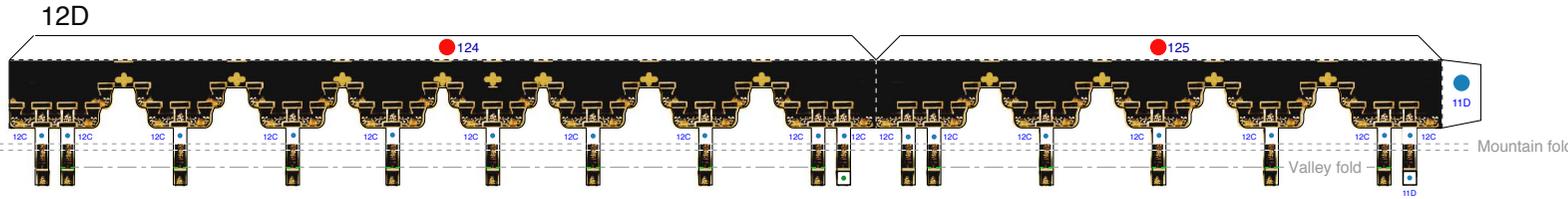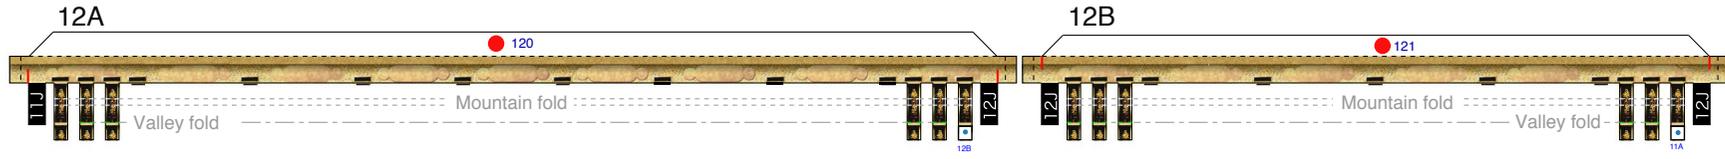



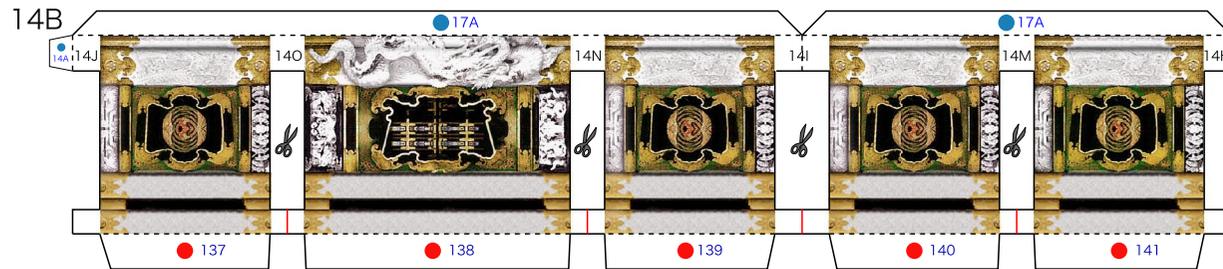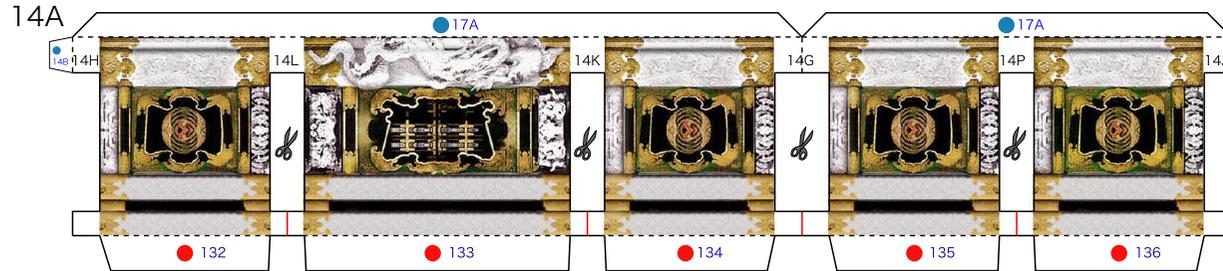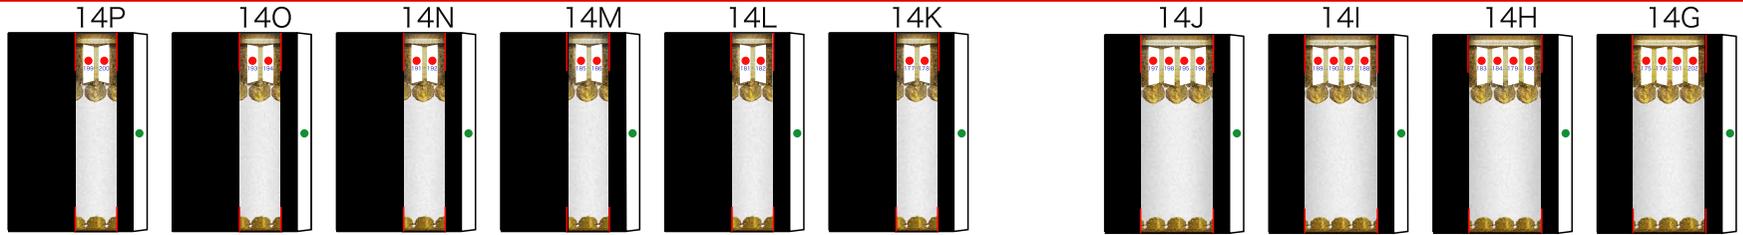

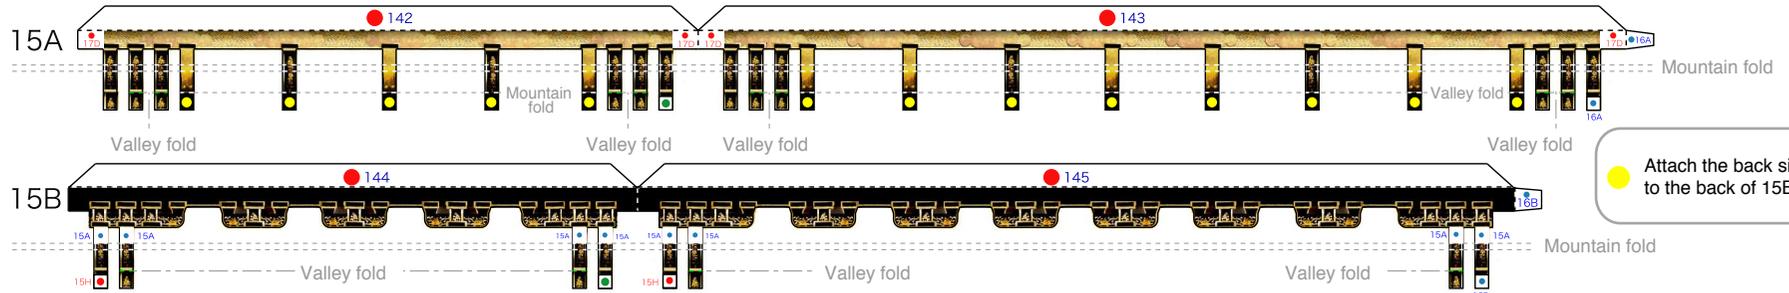

Attach the back side to the back of 15B.

