




13


12



www.facebook.com/mikroprmodels
www.facebook.com/rawenart
www.prmodels.eu

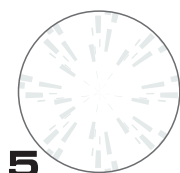


5

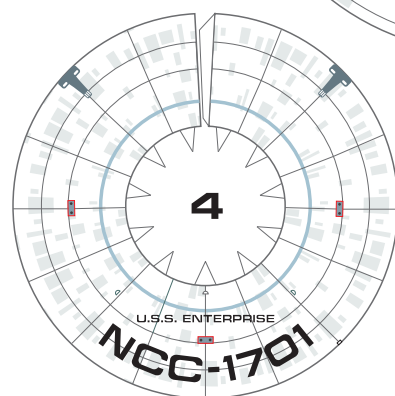


4

U.S.S. ENTERPRISE
NCC-1701

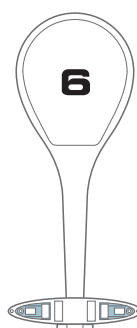

6



7



10



8




9




14




15

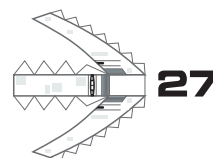

27

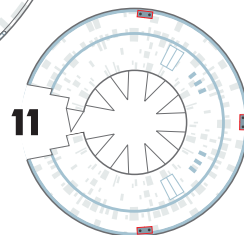

11

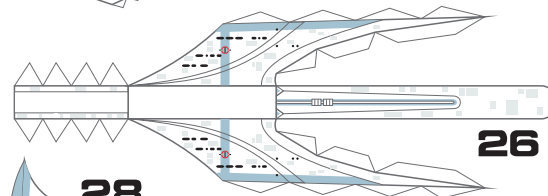


26



28



30

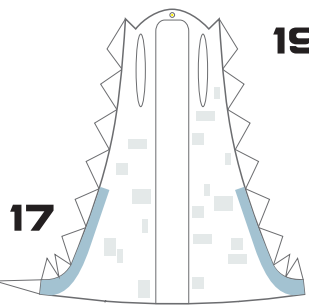

17



19



23



22




25



24




20

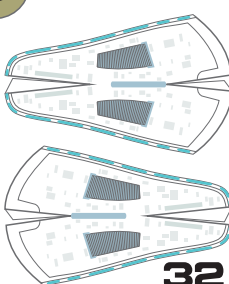

32




33

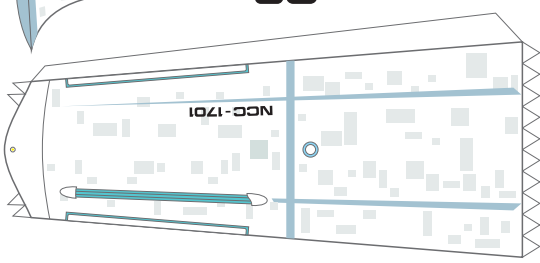


29




31

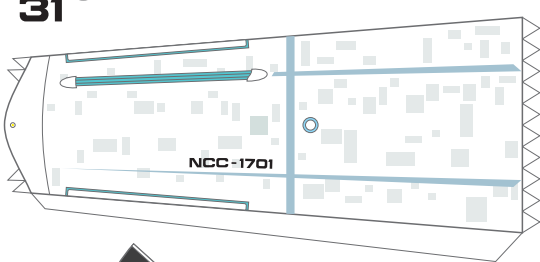


NCC-1701




16





18

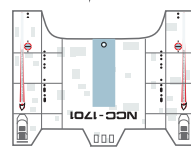

21

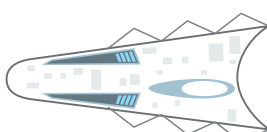


34

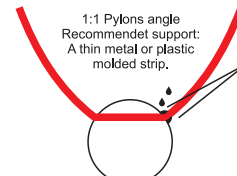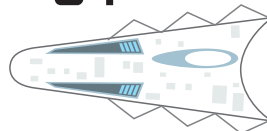


1:1 Pylons angle
Recommend support:
A thin metal or plastic
molded strip.

Put a little drops of
transparent glue
to the pylons base
and let them dry before
connecting the
nacelles.

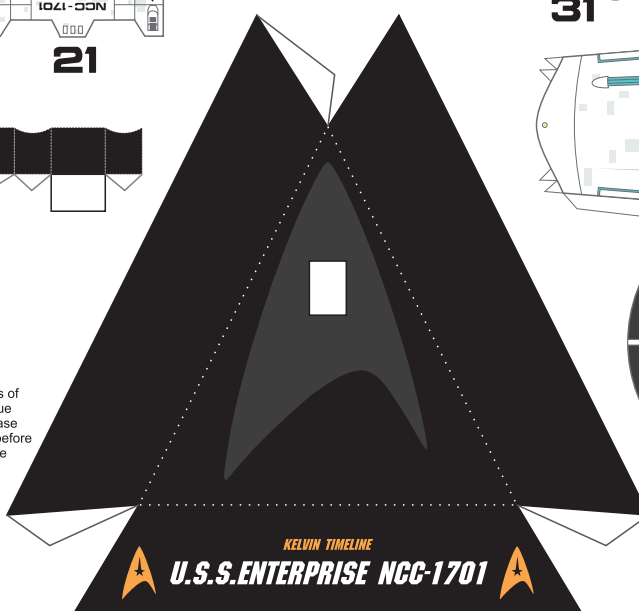

KELVIN TIMELINE


U.S.S. ENTERPRISE NCC-1701

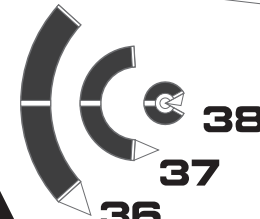

38

37

36

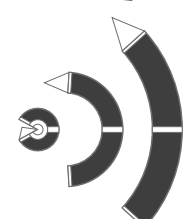

38



35

